

# C O M P A C T D I S C B E L T K I T S

## **CD-1** Includes belts for JVC & SANYO

### **JVC**

Models: CA-MX50BK, CA-MX90BK, DX-MX90BK, KX-G70  
PC-W333, PC-XT3, PC-X10, RC-X220, XL-2441TN,  
XL-2442BX, XL-R204TN, XL-R304TN

### **SANYO**

Models: MCD-222, MCD-225, MCD-S810

## **CD-1**

(2) 1425-58  
(2) 1425-50  
1407-160  
1407-458  
1425-64

1407-43

## **CD-2** Includes belts for PIONEER & HITACHI

### **PIONEER**

Models: CLD-2090, CLD-3090, CLD-95, CLD-990, CLD-M90  
PD-31, PD-4700, PD-5700, PD-6700, PD-7700, PMD-31,

### **HITACHI**

Models: DAC-501

## **CD-2**

1407-440  
1407-29  
1425-62  
1407-464

## **CD-3** Includes belts for AIWA

### **AIWA**

Models: CUD-DN5, DX-N7, DX-N9, NSX-D5, NSX-D9

## **CD-3**

1407-157  
1407-451  
1425-10

## **CD-4** Includes belts for SHARP

### **SHARP**

Models CD-C700, CP-c700, CP-N700, SC-2500CD,  
SC-2700AV, SC-3000AV, SC-3500AV, SC-4500AV,  
SC-8800CD

## **CD-4**

1425-12  
1425-59  
1407-452  
1425-30  
1425-06  
1407-440

## **CD-5** Includes belts for SONY & PANASONIC

### **SONY**

Models: CD-PX777ES, HC-DD115, HC-DH100, HC-DH50,  
HC-DH55, HS-TD105, MD-P605

### **PANASONIC**

Models: SL-CH7, SL-PC705, SL-PJ325, SL-PS700

## **CD-5**

1425-64  
1407-214  
1407-161  
1407-452

# U N I V E R S A L W A L K M A N B E L T K I T

## **WM-1** Includes belts for all Walkmans

## **WM-1**

1425-88 1407-431  
1425-08 1407-480  
1425-51 1425-50  
1407-462